



Cookwell

Heatwell

18 qt Roaster Oven

Operation

1. Do not put water in the heat well
2. Always use the cookwell pan for food
3. Preheating is recommended, to preheat, place the cookwell into the heatwell and cover. Be sure the temperature control is turned to the lowest setting and plug the cord into the 120 volt AC outlet. Preheat 20 minutes or until red light goes off.
4. Once unit is preheated place food into the roaster very carefully (remember unit will be hot)
5. Always cook with the cover in place

Note: COOKWELL, BODY, COVER AND ACCUMULATED STEAM WILL BE HOT. USE CAUTION AND HOT PADS TO LIFT COVER OR REMOVE COOKWELL FROM HEATWELL.

Cleaning

1. Turn off unit and unplug
2. Remove cookwell and empty all remaining food.
3. Wipe out cookwell, heatwell, and wipe outside of unit (needs to come back food free)

Crown Rental is responsible for the main washing of the machines. You are not required to do any washing.