



100 Cup



55 Cup



32 Cup



36 Cup Urn

Coffee Maker

WARNING – To protect against risk of electrical shock, **DO NOT** immerse unit, cord or plug in water or other liquids.

WARNING – **DO NOT** operate unit with defective cord or plug

WARNING – When coffee maker is in use, parts will be hot

1. Place coffee maker on flat, stable surface
2. Remove cover by grasping the top handle and turning it counter – clockwise
3. Remove the basket and fill the coffee maker with cold water, fill to the desired cup marking on the inside of the urn. Remember not to over fill
4. Place the desired amount of coffee in the basket. (you can place a filter in the basket under the grounds, but you don't need to use one)
5. Replace the cover and plug the unit in and turn the switch on
6. When the coffee is ready you will hear the percolating stop and the red indicator light will come on.

When done using the maker, Turn off the unit, unplug from outlet, empty all remaining coffee and grounds from the unit. Rinse with water, and drain extra water.

Crown Rental is responsible for the main washing of the machines. You are not required to do any washing.

Cups to be brewed	Coffee to use	Approx. brew time
20	2 Cups	17 Minutes
30	2 ¾ Cups	24 Minutes
36	3 1/8 Cups	36 Minutes
55	4 ¾ Cups	50 Minutes
60	5 Cups	60 Minutes
101	8 Cups	76 Minutes

Note: 1 pound regular grind coffee = 5 cups