

OPERATING INSTRUCTIONS

-WHILE WORK HOLD MACHINE SECURELY WITH BOTH HANDS, USING THE GRIP AND SIDE HANDLE. CHECK THE SECURITY OF THE STANCE OR POSITION FROM WHICH YOU ARE WORKING AT REGULAR INTERVALS (LADDERS DON'T PROVIDE A SECURE STANCE AND PRESENT AN ACCIDENT HAZARD). DO NOT PROVIDE EXCESSIVE PRESSURE—THIS WILL NOT ENHANCE THE MACHINES PERFORMANCE. SIMPLY POSITION AND GUIDE THE CHISEL.

INSERTING A CHISEL

-INSERT THE CHISEL BY PUSHING IT INTO THE CHUCK IN THE DESIRED POSITION, AGAINST SPRING PRESSURE, UNTIL IT LOCKS AUTOMATICALLY. TO REMOVE THE CHISEL, PULL BACK THE LOCKING SLEEVE AND PULL OUT THE CHISEL.

SIDE HANDLE

-MOVE THE SIDE HANDLE TO THE DESIRED POSITION AND CLAMP IT SECURELY BY TIGHTENING THE KNOB.

BEGINNING WORK

-SWITCH ON THE BREAKER AND BRING THE BLADE OF THE CHISEL INTO CONTACT WITH THE WORK SURFACE. IT IS NOT NECESSARY TO APPLY CONSTANT FINGER PRESSURE TO THE SWITCH AS IT REMAINS IN THE "ON" POSITION FOR SUSTAINED OPERATION.