Operating Information

- * DESIGNED FOR OUTDOOR USE ONLY!
- * Placing pots, pans, or other cooking accessories on the grill top can be dangerous and is not recommended. This grill is designed for direct cooking only. Only place food for direct cooking onto the grill top.
- * When coals are ready, evenly distribute throughout the firebox. A thickness of 1 or 2 briquettes is ideal for cooking.
- * Select desired cooking height and slide grill top onto the firebox. Make sure it has previously been sprayed with vegetable oil to prevent food from sticking.
- * We recommend adding 10-15 lbs. of charcoal each hour while the grill is in use.
- * Keep a spray bottle filled with water handy while cooking. It is helpful in reducing flare-ups while cooking.