

HOW TO OPERATE:

1. LOOSEN KNOB AND ROTATE AND MOVE OUTWARD TO EXPOSE PROBES.
2. FOR CARPET, PAD, AND UPHOLSTERY, THE POINTS CAN BE INSERTED INTO THE MATERIAL.
3. FOR WOOD, PLASTER, AND DRYWALL, JUST TOUCH THE POINTS TO THE MATERIAL SURFACE.
4. WHEN BOTH POINTS CONTACT MOIST MATERIALS, THE SENSOR BEGINS TO BEEP AND THIS USUALLY INDICATES ABNORMAL MOISTURE.
5. A FASTER BEEP INDICATES GREATER MOISTURE CONDITION AND A SLOWER BEEP INDICATES LESS MOISTURE. IN BOTH CASES, DRYING SHOULD CONTINUE UNTIL NO BEEP OCCURS.
6. NOTE: FALSE READINGS MAY OCCUR DUE TO CONDUCTIVITY FROM SOURCES SUCH AS METAL OR URINE SALTS.