

TO ATTACH:

1. POSITION THE HAND CUP ON THE CONTACT SURFACE SO THE RED LINE WILL BE VISIBLE IF IT SHOULD APPEAR WHILE LIFTING THE LOAD. CAUTION: TEST THE CUP FOR STAINING OR DEFORMATION OF LOAD SURFACES WITH LIGHT COLORS OR SOFT COATINGS.
2. PUMP THE PLUNGER UNTIL THE CUP ATTACHES COMPLETELY. WHEN THE RED LINE IS HIDDEN, VACUUM IS SUFFICIENT FOR LIFTING.
3. CHECK THE PLUNGER FREQUENTLY TO MAKE SURE THE CUP REMAINS SECURELY ATTACHED. IF THE RED LINE APPEARS WHILE LIFTING, SET DOWN THE LOAD IMMEDIATELY AND PUMP THE PLUNGER UNTIL THE RED LINE IS HIDDEN AGAIN. (SEE WARNINGS)

TO RELEASE:

1. SET THE LOAD ON A SECURE SUPPORT.
2. PRESS ON THE RELEASE LEVER UNTIL THE CUP DISENGAGES COMPLETELY.

WARNINGS!!

FAILURE TO OBSERVE WARNINGS COULD DAMAGE THE HAND CUP OR THE LOAD, OR CAUSE INJURY TO THE USER.

\* DO NOT USE THE LIFT CUP TO LIFT LOADS THAT EXCEED THE LOAD CAPACITY.

\* DO NOT USE THE CUP TO SUPPORT A PERSON.

\* DO NOT PLACE THE CUP FACE AGAINST SURFACES WHICH COULD DAMAGE THE SEALING EDGES.

\* AVOID CONDITIONS THAT COULD CAUSE THE CUP TO SLIP OR TO DISENGAGE PREMATURELY, SUCH AS: CONTAMINANTS, CUTS OR SCRATCHES IN THE CUP FACE OR CONTACT SURFACE, APPLYING THE CUP TO POROUS MATERIALS, OR APPLYING PRESSURE AGAINST THE CUP EDGE.

\* DO NOT USE THE CUP TO LIFT WHEN THE RED LINE IS VISIBLE, IF THE RED LINE REAPPEARS FREQUENTLY, DISCONTINUE USE AND RETURN TO CROWN RENTAL.

\* DO NOT ALLOW ANYTHING TO INTERFERE WITH FREE MOVEMENT OF THE PLUNGER WHILE THE CUP IS ATTACHED.

\* DO NOT TOUCH THE RELEASE LEVER WHILE LIFTING.

\* DO NOT USE SOLVENTS, GASOLINE OR OTHER HARSH CHEMICALS TO CLEAN THE CUP.