

SAFETY INSTRUCTIONS

DOUBLE -INSULATED: THIS SAW IS CONSTRUCTED WITH TWO SEPARATE LAYERS OF ELECTRICAL INSULATION. A SAW BUILT WITH THIS INSULATION SYSTEM DOES NOT NEED TO BE GROUNDED. AS A RESULT, THIS SAW IS EQUIPPED WITH A TWO-PRONG PLUG, WHICH PERMITS YOU TO USE EXTENSION CORDS WITHOUT CONCERN FOR MAINTAINING A GROUND CONNECTION.

DANGEROUS ENVIRONMENTS: KEEP WORK AREA CLEAN; CLUTTER INVITES ACCIDENTS. AVOID USE ON DAMP OR WET FLOOR. BE SURE LIGHTING IS GOOD.

ACCIDENTAL STARTING: TO AVOID ACCIDENTAL STARTING, DO NOT CARRY SAW WITH FINGERS ON SWITCH.

CORD ABUSE: NEVER CARRY SAW BY THE CORD OR YANK THE CORD TO DISCONNECT FROM AN OUTLET. KEEP CORDS AWAY FROM HEAT, OIL, AND SHARP EDGES.

EXTENSION CORD: AVOID USING LONG EXTENSION CORDS, AS THEY WILL CAUSE SOME LOSS OF POWER. TO KEEP THE LOSS TO A MINIMUM AND PREVENT SAW FROM OVERHEATING, USE A HEAVY-DUTY EXTENSION CORD WITH THESE MINIMUM WIRE SIZES:

25' = 16 GAUGE WIRE

50' = 14 GAUGE WIRE

SAFETY GLASSES: ALWAYS WEAR SAFETY GLASSES WHEN USING THE POWER SAW. ALSO USE FACE OR DUST MASK IF CUTTING OPERATION IS DUSTY.

KEEP BLADES CLEAN AND SHARP: USING A DULL BLADE WILL PLACE A HEAVY LOAD ON YOUR SAW AND INCREASE THE DANGER OF KICKBACK. KEEP EXTRA BLADES ON HAND, SO THAT SHARP BLADES ARE ALWAYS AVAILABLE. USE ONLY CRAIN NO. 787 CARBIDE-TIPPED BLADES

BLADE GUARD: THE BLADE GUARD ATTACHED TO YOUR SAW IS FOR YOUR SAFETY AND PROTECTION. IF IT BECOMES DAMAGED, DO NOT OPERATE YOUR SAW UNTIL IT HAS BEEN REPAIRED. ALWAYS LEAVE BLADE GUARD IN OPERATING POSITION WHEN USING THE SAW.

FEATURES: THIS TOE-KICK SAW IS DESIGNED FOR REMOVAL OF FLOORS OR UNDERLAYMENT UNDER TOE-KICK AREAS. IT DOES THE JOB WHENEVER A FLUSH CUT AT THE WALL IS NECESSARY.

EASY TO USE: THE BUILT-IN HANDLE IS IN A NATURAL AND CONVENIENT POSITION.

POWERFUL MOTOR: 11 AMP, 2 ½ HP, 4500 RPM

LOW-PROFILE CUTTING HEAD: WILL FIT UNDER TOE-KICKS AS LOW AS 3" IN HEIGHT.

DEPTH OF CUT: THE SAW WILL CUT UP TO ¾" THICK UNDERLAYMENT. THE BLADE DEPTH IS PRESET; THEREFORE, NO DEPTH ADJUSTMENT IS NECESSARY.

BLADE: COMES WITH A 3 3/8" DIAMETER CARBIDE-TIPPED BLADE (NO.787)

BLADE CHANGING: UNPLUG THE SAW; PUSH AND HOLD THE SPINDLE LOCK LEVER DOWN TO STOP BLADE ROTATION. WHILE HOLDING THE SPINDLE LOCK LEVER, INSERT THE ALLEN WRENCH (PROVIDED) INTO THE BLADE'S SOCKET SET SCREW AND TURN IT COUNTER-CLOCKWISE TO LOOSEN. NOTE: FOR EXTRA LEVERAGE, INSERT AN EXTENSION ONTO THE ALLEN WRENCH. REPLACE WITH NEW BLADE AND RETIGHTEN THE SCREW FIRMLY BEFORE USE.

OPERATING: TO AVOID ACCIDENTAL STARTING, ALWAYS DISCONNECT THE SAW FROM POWER SOURCE BEFORE INSERTING THE CUTTING HEAD INTO THE TOE-KICK SPACES.

FIRST TILT THE SAW AT AN ANGLE AND INSERT ITS CUTTING HEAD INTO THE TOE-KICK.
THEN LAY THE SAW DOWN TO BEGIN CUT.
PLUG-IN SAW; HOLD FIRMLY AND PULL THE TRIGGER SWITCH TO TURN THE MOTOR ON.
SLOWLY PUSH THE SAW FORWARD AND ALONG THE TOE-KICK
DO NOT FORCE THE SAW; LET THE BLADE CUT AT THE HIGHEST RPM POSSIBLE.
THE TOE-KICK SAW MAY ALSO BE USED TO ENLARGE THE EXPANSION GAP AROUND THE
PERIMETER OF A LAMINATE PLANK FLOOR.