

A reminder of how to use the machine

- 1. After Reaching Operating Temperature, be sure to purge the hose 2 to 3 times, to eliminate any water in lines.
- 2. Only turn the steam volume control knob a quarter turn.
 To do this, turn the knob all the way to the right
 (clockwise). Next, slowly turn the knob back on, but never more than a quarter of a turn. This makes the cleaning process easier and more effective.
- 3. If the steam volume control knob is turned too far open, it will put down too much water and not clean as well, it also may shorten the life of the nylon brushes.
- 4. To properly operate the machine, work slowly across the surface keeping the brush flat against the surface.
- 5. Move the brush very slowly across the surface allowing the surface to heat. This will break the surface tension of the dirty surface and allow the vapor to work away the soiled area. Let the machine do the work; don't use it as a scrub brush.


POPLUX 5000 UL

- #1 Make sure (3) Pressure Gauge is on zero. Press down on cap (4) and turn counterclockwise to remove cap
- #2 Fill unit with warm or hot clean water. NEVER ADD ANYTHING BUT CLEAN WATER TO THE TANK
- #3 Close 🐧 Safety Cap. Turn clockwise. Finger Tighten only! DO NOT OVERTIGHTEN
- #4 Plug electric cord into a properly grounded 110-V outlet
- #5 Press Pre On/Off 110-V Power Switch to "on" position 12-V Steam Button to "on" position
- Reset breaker button located on top of machine
- #6 When **①** green light is on, machine is ready for operation. While cleaning, pressure will drop and green light will go off, this is normal operation.
- #7 When **(II)** red light comes on, water must be added to the unit. Turn power button off
- #8 With G Steam Button on, press G Steam Handle Switch until all pressure is released from tank. When (a) pressure gauge shows zero pressure, remove pressure cap. DO NOT OPEN CAP UNDER PRESSURE!
- #9 Unplug the unit
- #10 To refill, follow steps 1 5.



Steam Handle

Vapor On/ Off 12-V

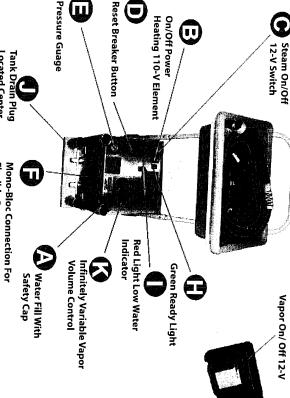

READ ALL INSTRUCTIONS BEFORE **USING THIS APPLIANCE** Important Safeguards

- Do not leave unit plugged in. Unplug from outlet when not in use and before servicing
- Use indoors only.
- Do not expose to rain. Store indoors only. Do not store in temperatures below freezing.
- Do not allow to be used as a toy. Close attention is necessary when used near children.

Ģ 4

- Use this appliance following the instructions described on other side. Use only manufacturers reccommended attachments
- Do not use this unit if cord or plug is damaged. If the unit is not working properly return it to an authorized service center.
- corners. Keep the cord away from heated surfaces. not close a door on the cord. Do not pull the cord around sharp edges or Do not pull or carry the unit by its cord. Do not use the cord as a handle. Do
- œ Do not unplug the unit by pulling the cord. To unplug, grasp the plug, not the cord.
- Do not handle the plug or appliance with wet hands.
- Do not put any objects into openings. Do not use with any openings blocked or plugged up; keep free of dust, lint, hair, or anything that will obstruct air flow.
- Keep hair, loose clothing, fingers and all body parts away from openings.
- Turn off all controls before unplugging the machine
- <u>;</u>3 Use extra care when cleaning on stairs. Do not use with flammable or combustable liquids or use in areas where
- 15. Connect to a properly grounded outlet only! 16. CAUTION - MACHINE EXTERIOR CAN BECOME EXTREMELY HOTI they may be present.
- CAUTION Use only type 12/3 SJTW · 15A 125-V 25ft. UL extension cord.

CAUTION: Risk of scaulding. Do not remove filler cap while unit is on or shows cap. DO NOT POINT STEAM JET TOWARD YOURSELF OR OTHERS pressure on the pressure gauge. Bleed all pressure off BEFORE opening filler Temperatures can reach 290 degrees F.

www.vaporlux.com 800-467-6229

Bottom

Located Center

Flexible Steam Hose